


How do I view the serial port?

The following example describes the win10 system.

1. please find the "This computer" or "computer" icon on the computer



2. right-click , Select management ", enter" computer Management "Interface;

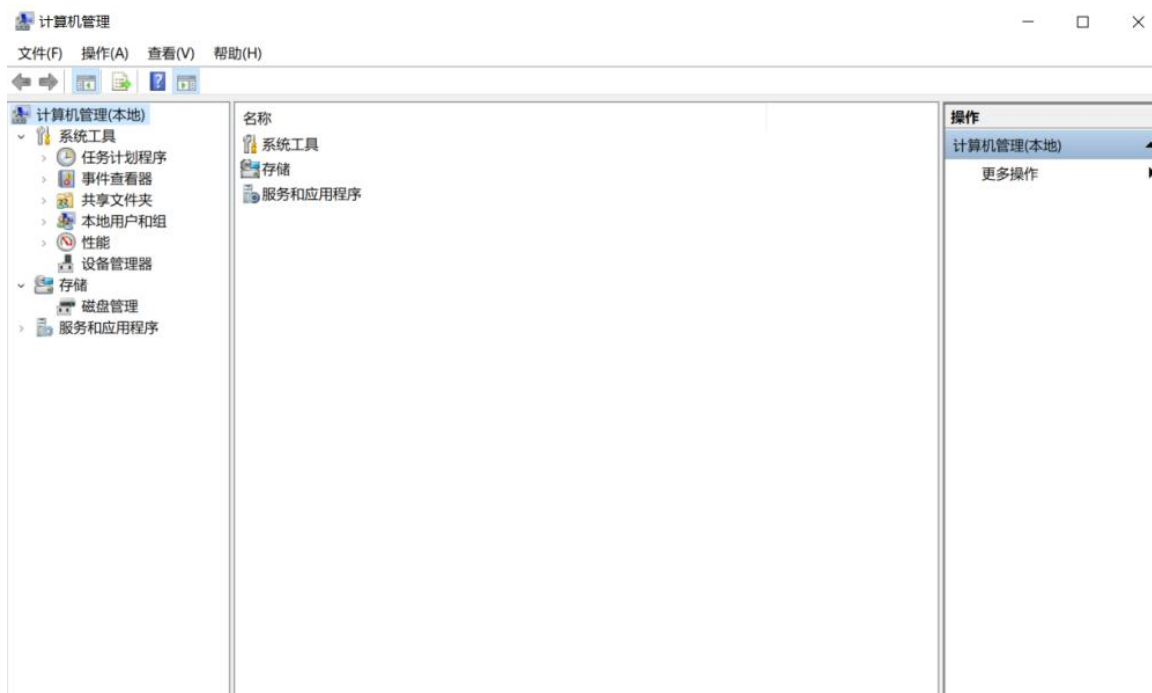

3. from computer Management "On the left side of the interface, find" device Manager ", and click to enter;



4. enter device Manager "After the interface, click" port ";



5. click port in front of > "To expand the port list;



6. at this point, we can see that our serial port is com6.

Some computers have many serial ports, so we need to distinguish which one is the serial port we need to use.

How to distinguish?

① after opening the port list according to the above steps, you can unplug our Bluetooth adapter to see which port has disappeared in the port list, and then plug in to see which port is restored. Then the port (COM port) that appears after unplugging and disappearing is the port of the Bluetooth adapter we need.

② The name is "USB serial device" or "CH340 com" (different versions of the device port list display different names), which is the port of the Bluetooth adapter we need. If the name in the list is "USB serial device" or "CH340" there is more than one COM port. Please follow step ① to unplug and confirm.